



# Mounting instructions

## LED Ceiling light DOR

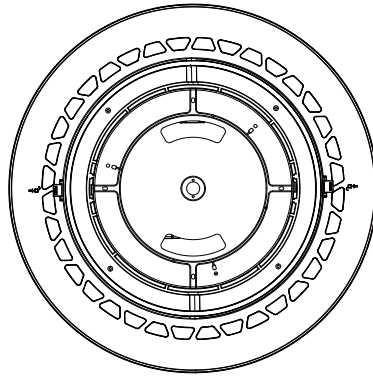

DOR450 Ceiling

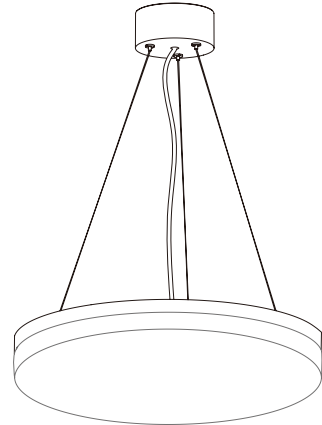

DOR450 lifting Rope




**IP54**


**Required Tools**



## WARNING

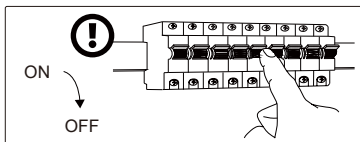

Check that the power is off before conducting any maintenance and assembly work



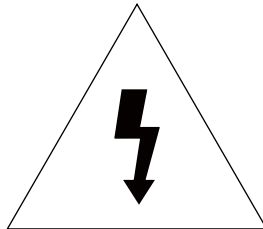


Caution, danger of electric shock





The installation and commissioning of the luminaire as well as any modification to the luminaire may only be performed by authorized personnel (qualified electrician)

### Step:1

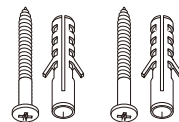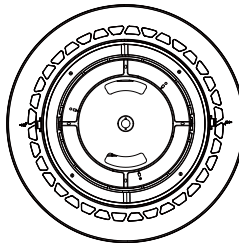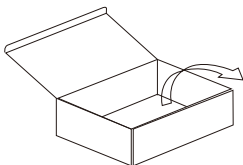


### Step:2


DOR450: 214mm  
DOR260/DOR320: 120mm  
DOS260/DOS320: 120mm

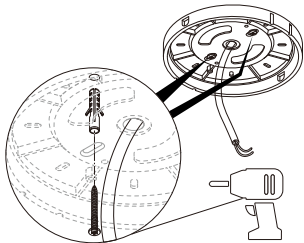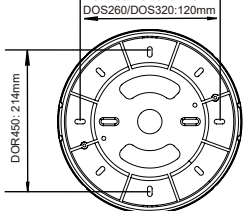

### OPTION:A

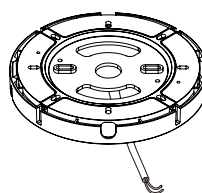

### OPTION:B


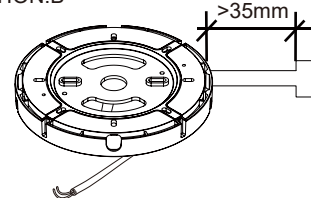


## CCT + POWER SWITCHABLE




**DOR450**

Switching selection sheet			
Pout max.	Irated	1	2
28W	200mA	—	—
32W	230mA	ON	—
36W	260mA	ON	ON

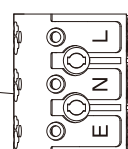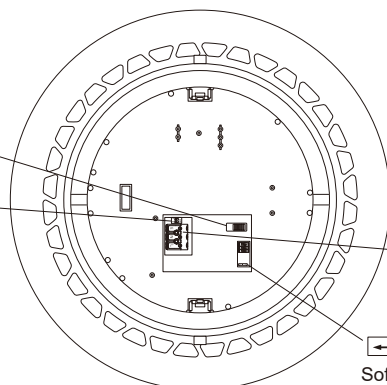


Soft start, switch



Min. 2 x 0,75 mm<sup>2</sup>  
Max. 3 x 1,5 mm<sup>2</sup>




Step:3

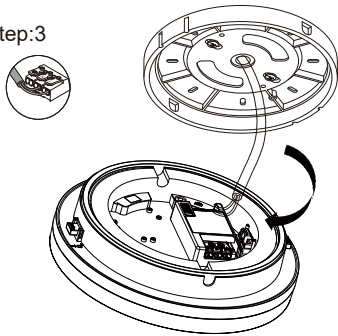



Step:4

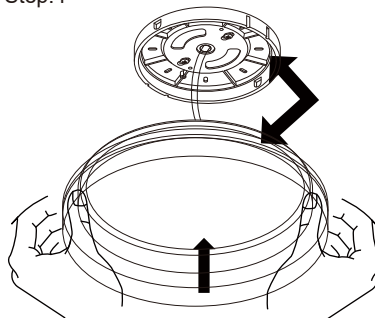


! AUTO CLICK

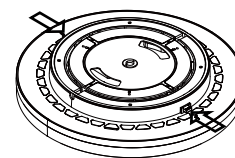


OPTION--SAFETY COVER

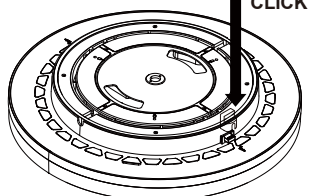


1

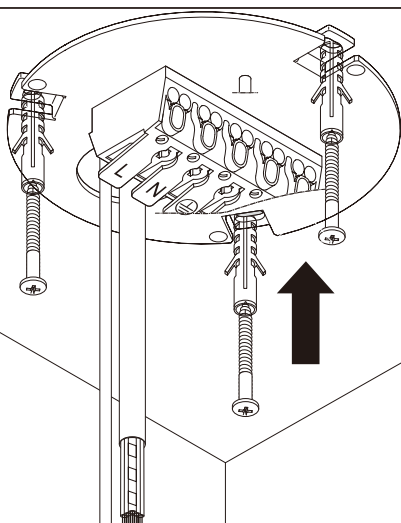


2

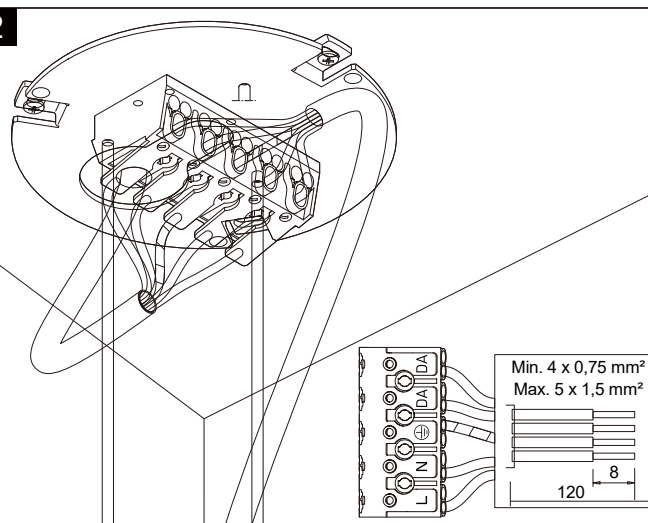


3

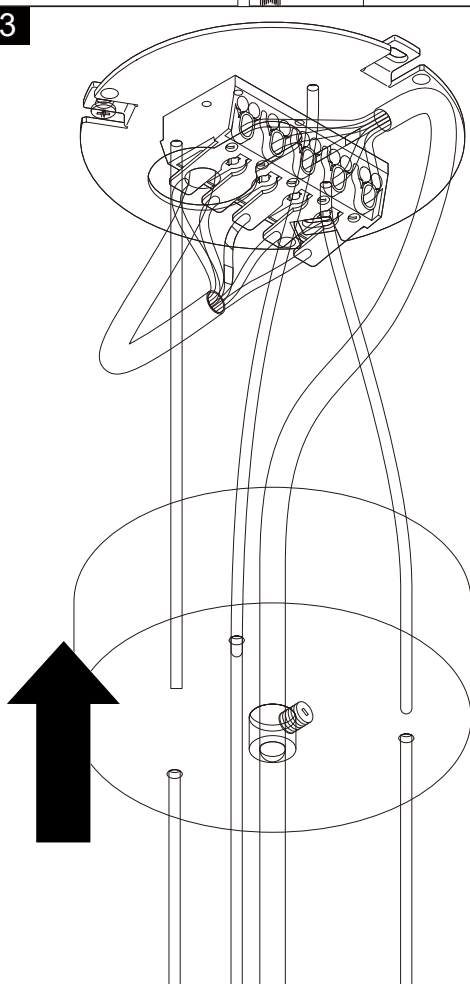

4

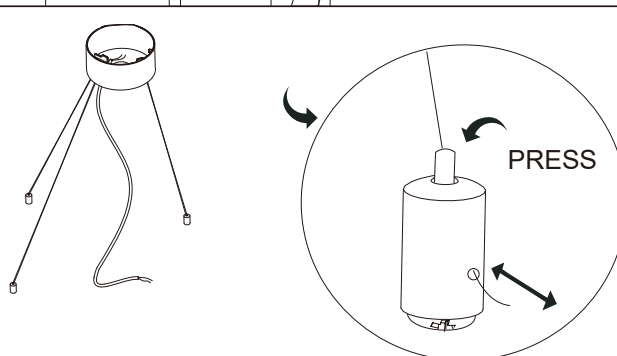

5

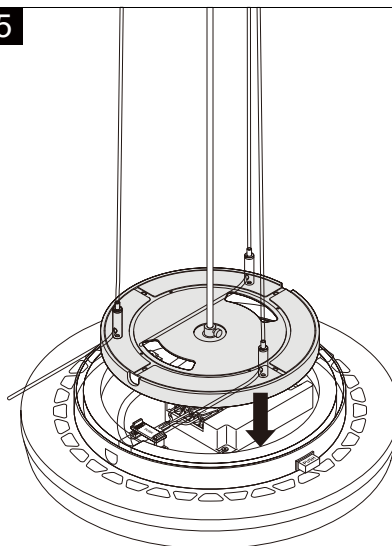

6

